

IPC Series

FLAT PANEL DISPLAY

Non Face-Plate Type

(DC12V, 10.4"-TFT, LVDS)

FPD-M75VT-DC1

(DC12V, 12.1"-TFT, LVDS)

FPD-L75ST-DC1

(DC12V, 15.0"-TFT, LVDS)

FPD-H75XT-DC1

User's Manual

CONTEC CO.,LTD.

Check Your Package

Thank you for purchasing the CONTEC product.

The product consists of the items listed below.


Check, with the following list, that your package is complete. If you discover damaged or missing items, contact your retailer.

Product Configuration List

	FPD-M75VT-DC1	FPD-L75ST-DC1	FPD-H75XT-DC1
Name	Pcs.	Pcs.	Pcs.
Flat panel display	1	1	1
Waterproof packing	1	1	1
Three-point sems screws (M3 x 6)	1	1	1
Three-point sems screws (M3 x 20)	6	8	8
Sealing washer (M3)	6	8	8
Washer (M3)	6	8	8
Spring Washer (M3)	6	8	8
Nut (M3)	6	8	8
Power supply connector complete set (Contact...4, housing...1)	1 set	1 set	1 set
Clamp for preventing cables from being disconnected	2	1	3
AC adapter jack fixed clamp	1	1	1
IPC Precaution List	1	1	1
Product guide	1	1	1
EU/FCC Declaration Conformity	1	-	1
Serial number label	-	1	-

(Note) The manual of this product is being offered as PDF file on the CONTEC's Web site.

Each cable for this product is not bundled. Purchase it separately.

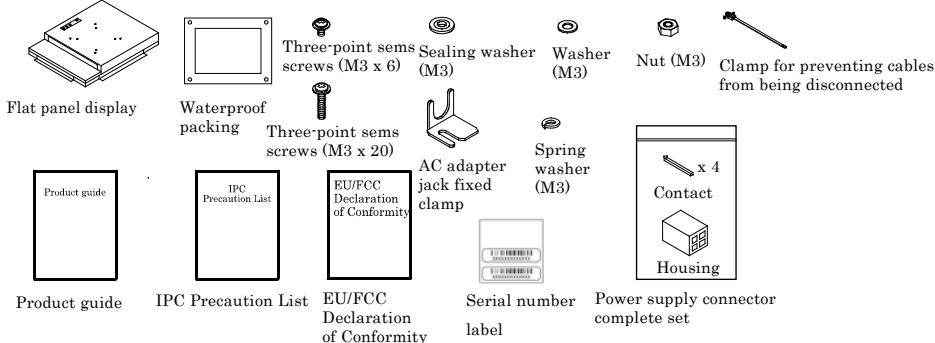

Copyright

Copyright 2008 CONTEC CO., LTD. ALL RIGHTS RESERVED.

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.

CONTEC CO., LTD. makes no commitment to update or keep current the information contained in this document.

The information in this document is subject to change without notice.

All relevant issues have been considered in the preparation of this document. Should you notice an omission or any questionable item in this document, please feel free to notify CONTEC CO., LTD.

Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using this product.

Trademarks

Intel and Celeron are registered trademarks of Intel Corporation. MS, Microsoft and Windows are trademarks of Microsoft Corporation. Other brand and product names are trademarks of their respective holder.

Table of Contents

Check your package..... i

Copyright ii

Trademarks ii

Table of Contents.....iii

1.

INTRODUCTION

1

About the Product 1

 Features 1

Customer Support 2

 Web Site..... 2

Limited One-Year Warranty..... 2

How to Obtain Service..... 2

Liability..... 2

Safety Precautions 2

 Safety Information 3

 Handling Precautions 3

2.

SPECIFICATIONS

5

Function Specifications 5

General Specifications..... 6

Optical Display Specifications 7

Physical Dimensions..... 8

3.

PART NAMES

11

Part Names 11

 LVDS Input Interface Connector 12

 DVI-D Input Interface Connector..... 13

 USB Touch Panel Connector 14

 Dip Switch 14

 Back SW For Backlight Control..... 15

4.

HARDWARE SETUP

17

Installation Requirements..... 17

Panel Cut..... 19

 Attaching the attachment fittings to the Main Unit..... 21

Other Panel Attachment Examples..... 23

5.	CONNECTION TO THE HOST COMPUTER	25
	LVDS Interface Connection	25
	DVI-D Interface Connection	30
	Touch Panel Data Communications	31
6.	POWER SUPPLY CONNECTION	33
	DC Power Supply Input Connector : DC-IN.....	33
	AC Adapter Jack	34
	AC adapter code removal prevention fitting	34
7.	LED INDICATORS	35
8.	TOUCH PANEL	37
9.	DISPLAY MODE	39
10.	OPTIONS	41

1. Introduction

About the Product

These products are two inputs (LVDS or DVI-D sign) compatible, embedded type (open-framed), TFT LCD display unit for use with host computers such as the CONTEC IPC series and SBCs (single board computers).

Touch panel is available via RS-232C (Built-in video cable) or USB connection.

Because its panel attachment is compatible with the predecessor IPC-DT/x65 series, they are transposable.

Features

- LVDS and DVI-D inputs supported embedded type TFT LCD display

LVDS and DVI-D inputs, that are less affected by the interference of noise, are supported for host computer connection. Because of the digital signal input, up to 5 m of cable length is available. The video signal and touch panel signal can be connected with one cable depending on the host PC to be connected.

Full-bright, wide-angle-of-visibility type of liquid crystals capable of displaying up to 16,777,216 colors on the 15 inches and 262,144 colors on the 12.1/10.4 inches.

- Touch panel enables keyboard-less operation.

These products have analog touch panel enabling mouse emulation using driver software.

Touch panel is available via USB connection or optional display cable (built-in video signal and touch panel signal).

- The panel attachment size compatible with IPC-DT/x65 series

Because its panel attachment is compatible with the predecessor IPC-DT/x65 series, they are transposable.

- Front side that can be meet the IP65-rated drip-proof specification using the bundled waterproof packing

Attaching the panel with a waterproof packing, the front side can be meet the IP65-rated drip-proof specification.

- AC adapter and connection cable is available as option.

An optional AC adapter (IPC-ACAP12-02) and connection cable is available to run the display from the AC power supply and to use for connection to the host computer.

* For more details on host computer or option of this product, contact your retailer.

Customer Support

CONTEC provides the following support services for you to use CONTEC products more efficiently and comfortably.

Web Site

Japanese <http://www.contec.co.jp/>

English <http://www.contec.com/>

Chinese <http://www.contec.com.cn/>

Latest product information

CONTEC provides up-to-date information on products.

CONTEC also provides product manuals and various technical documents in the PDF.

Free download

You can download updated driver software and differential files as well as sample programs available in several languages.

Note! For product information

Contact your retailer if you have any technical question about a CONTEC product or need its price, delivery time, or estimate information.

Limited One-Year Warranty

CONTEC Products are warranted by CONTEC CO., LTD. to be free from defects in material and workmanship for up to one year from the date of purchase by the original purchaser.

Repair will be free of charge only when this device is returned freight prepaid with a copy of the original invoice and a Return Merchandise Authorization to the distributor or the CONTEC group office, from which it was purchased.

This warranty is not applicable for scratches or normal wear, but only for the electronic circuitry and original products. The warranty is not applicable if the device has been tampered with or damaged through abuse, mistreatment, neglect, or unreasonable use, or if the original invoice is not included, in which case repairs will be considered beyond the warranty policy.

How to Obtain Service

For replacement or repair, return the device freight prepaid, with a copy of the original invoice. Please obtain a Return Merchandise Authorization Number (RMA) from the CONTEC group office where you purchased before returning any product.

* No product will be accepted by CONTEC group without the RMA number.

Liability

The obligation of the warrantor is solely to repair or replace the product. In no event will the warrantor be liable for any incidental or consequential damages due to such defect or consequences that arise from Safety Precautions. Understand the following definitions and precautions to use the product safely.

Safety Precautions

Understand the following definitions and precautions to use the product safely.

Safety Information

This document provides safety information using the following symbols to prevent accidents resulting in injury or death and the destruction of equipment and resources. Understand the meanings of these labels to operate the equipment safely.

 DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

Handling Precautions

CAUTION

- As this product contains precision electronic components, do not use or store in environments subject to shock or vibration.
- This product is not intended for use in aerospace, space, nuclear power, medical equipment, or other applications that require a very high level of reliability. Do not use the product in such applications.
- If you utilize this product in such usages where high reliability and safety are required as on the trains, vessels, automobiles or crime- or disaster-prevention devices, contact your retailer.
- Do not use or store the product in a location such as extremely high or low temperature, rapid temperature changes, and the place which receives a strong ultraviolet ray.
Example: - Exposure to direct sun
 - In the vicinity of a heat source
- Do not use or store the equipment in a dusty or humid place.
- Do not perform key operations with the touch panel to implement a process that might endanger life or result in serious damages. Design a system that can cope with incorrect key input operations.
- Do not use a sharp-edged object, such as a mechanical pencil, to operate the touch panel in order to prevent scratching or malfunctions.
- Protect the touch panel against shock to prevent damage.
- CONTEC is not liable for a product that has been modified by the user.
- When the surface or frame of the touch panel has become dirty, wipe it with neutral detergent. Do not wipe the touch panel with thinner, alcohol, ammonia, or a strong chlorinated solvent.
- Do not plug or unplug the connector with the equipment powered on. as doing so may result in a malfunction or fault.
- Some products require configuration settings. Always check these requirements before use. Also, never set switches or jumpers to other than the specified settings as this may cause a fault.
- A characteristic of analog touch panels is that the detected position may vary due to changes in the ambient environment (temperature and humidity) and changes in resistance values over time. In such cases, the touch panel should be recalibrated and the calibration data updated.
- Regular maintenance is necessary for the backlight on the touch panel and the display for the longevity parts.
- If you discover damaged or missing items, contact your retailer.

Use environment

This product operates under the following operating systems:

Windows XP/2000/NT 4.0/98SE/95OSR2

- * The touch panel USB interface is only supported on Windows XP/2000/98SE.

Life expectancy of consumable components

(1) Backlight--- Display brightness decreases over time with use. The operating life of the backlight (brightness reduced to 50% of original) is 50,000 hours for all models. (Assuming continuous operation at 25 degrees centigrade.)

(2) Touch panel--- The operating lifetime of the touch panel is at least 1 million touches (as tested by mechanical touching under 300g of force at a rate of two presses per second).

- * CONTEC accepts your request for replacing each consumable in these products as a request for repair (at an additional cost). Contact your local retailer or CONTEC sales office.

LCD Display Pixel Drop

LCD display may have some pixels being dropped (bright and black spots) below a certain threshold. Note that this is not a failure or a defect.

Burn-in on TFT Display

"Burn-in" may occur if the same display is retained for a long time. Avoid this by periodically switching the display so that the same display is not maintained for a long time.

- * Burn-In: Phenomenon characterized by a TFT display as a result of long-time display of the same screen where a shadow-like trace persists because electric charge remains in the LCD element even after the patterns are changed.

FCC PART 15 Class A Notice(only FPD-M75VT-DC1 and FPD-H75XT-DC1)

NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference at his own expense.

WARNING TO USER

Change or modifications not expressly approved the manufacturer can void the user's authority to operate this equipment.

2. Specifications

Function Specifications

Table 2.1. Function Specifications

Item		Specification		
		FPD-M75VT-DC1	FPD-L75ST-DC1	FPD-H75XT-DC1
Screen				
Assembly type		Embedded type		
Screen size		10.4 inches	12.1 inches	15.0 inches
Number of pixels		640 x 480 dots	800 x 600 dots	1024 x 768 dots
Display type		TFT Color LCD		
Number of colors		262,144 colors	262,144 colors	16,777,216 colors *3
Brightness control		Adjustment using the back switch or software control from the host computer		
Backlight control		Can be turned on or off by a back switch or via software control from the host computer.		
Display interface		LVDS input (26 pin half pitch connector) DVI-D input (24 pin DVI (Female) connector)		
Input signal specification	LVDS input	26 pin half pitch connector *1		
	DVI-D input	Digital RGB (complies with TMDS) *1		
Cable length which recommends		5m or less		
Touch panel				
Resolution		4096 x 4096		
Detection method		Resistive-layer analog method		
Touch life expectancy		One million repeated touches (as tested by mechanical touching under 300g of force at a rate of two presses per second)		
Touch panel interface		Connect to the host computer using either USB *2 or RS-232C. RS-232C : built-in LVDS/DVI Connector USB: USB1.1-compliant, TypeB Connector		
Touch panel driver (option)		For Windows : IPC-SLIB-01		

*1 Using a cable longer than 5 m may reduce the image quality. The cable should be as short as possible as degradation. The image quality may result even when the cable is 5 m or shorter depending on the type of host computer or cable.

*2 The touch panel USB interface is only supported on Windows XP/2000/98SE.

*3 It is 262,144 when connecting the LVDS.

Table 2.2. Power Supply Specifications

Item	Specification		
	FPD-M75VT-DC1	FPD-L75ST-DC1	FPD-H75XT-DC1
Power supply input part			
Power supply connector	4-pin connector for +12・24VDC power supply		
AC adapter jack	Corresponding to +12 (±5%) VDC output AC adapter		
Input power supply voltage	+12V・24VDC±5%		
Consumption current	1.4A(Max.)	1.4A (Max.)	1.6A (Max.)
Consumption current (power save mode)	0.4A (Max.)		

General Specifications

Table 2.3. General Specifications

Item		Specification		
		FPD-M75VT-DC1	FPD-L75ST-DC1	FPD-H75XT-DC1
Environment				
Operating temperature *1		0・50℃		
		0・40℃ (when using an AC adapter)		
Storage temperature		-10・60℃		
Operating humidity *2		10・90%RH (No condensation)		
		10・85%RH (No condensation) (when using an AC adapter)		
Floating dust particles		Not to be excessive		
Corrosive gas		None		
Noise resistance	Line noise	AC line: 2 kV *3, Signal line: 1 kV (IEC1000-4-4Level3、EN61000-4-4Level3)		
	Electrostatic withstanding voltages	Contact : 4 kV (IEC1000-4-2Level2, EN61000-4-2Level2) Airborne : 8 kV (IEC1000-4-2Level3, EN61000-4-2Level3)		
Vibration resistance		10・57 Hz/Single-side amplitude or 0.075 mm 57・150 Hz/1.0 G in the X/Y/Z directions for 40 minutes each (Conforming to JIS C0040 and IEC68-2-6)		
Shock resistance		10 G in the X/Y/Z directions for 11 ms: Half-sine wave (Conforming to JIS C0041 and IEC68-2-27)		
Structure				
Physical dimension (mm)		292(W) x 43(D) x 234(H)	318(W) x 43(D) x 252(H)	380(W) x 44(D) x 298(H)
Panel cut dimensions (mm)		216(W) x 164(H) (Requires eight surrounding M3 stud holes or round φ4 holes)	252(W) x 190(H) (Requires eight surrounding M3 stud holes or round φ4 holes)	309(W) x 233(H) (Requires eight surrounding M3 stud holes or round φ4 holes)
Weight		2.1kg	2.4kg	3.6kg
Waterproofing and dust-proofing		Front part conforming to IP65 (Use the packing supplied.)		

*1 In the installed angle which is recommended. For more details on the Operating temperature, refer to the Installation Requirements.

*2 Wet-bulb temperature 38℃ or lower

*3 When using the optional AC adapter IPC-ACAP12-02.

Optical Display Specifications

Table 2.4. Optical Display Specifications

Item	Condition			Specifications (25°C Typ. Value)		
				FPD-M75VT-DC1	FPD-L75ST-DC1	FPD-H75XT-DC1
Visual angle (vertical)	CR≥10	φ=180°	Display in monochrome	50deg	50deg	50deg
		φ=0°		60deg	70deg	70deg
Visual angle (horizontal)		φ=+90°		70deg	70deg	70deg
		φ=−90°		70deg	70deg	70deg
Surface brightness (at center)	Display in white			450cd/m ²	350cd/m ²	250cd/m ²

*1 Surface brightness is a numerical value in a display simple substance.
The brightness that let the touch panel pass serves as about 77% of the above-mentioned numerical value.

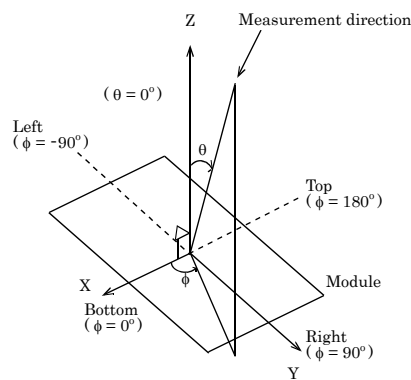


Figure 2.1. Viewing Range Definition

⚠ CAUTION

The above optical specification data shows optical characteristics of the liquid crystal in the display; the data does not represent the actual view on the display or its viewing angles.

Physical Dimensions

FPD-M75VT-DC1

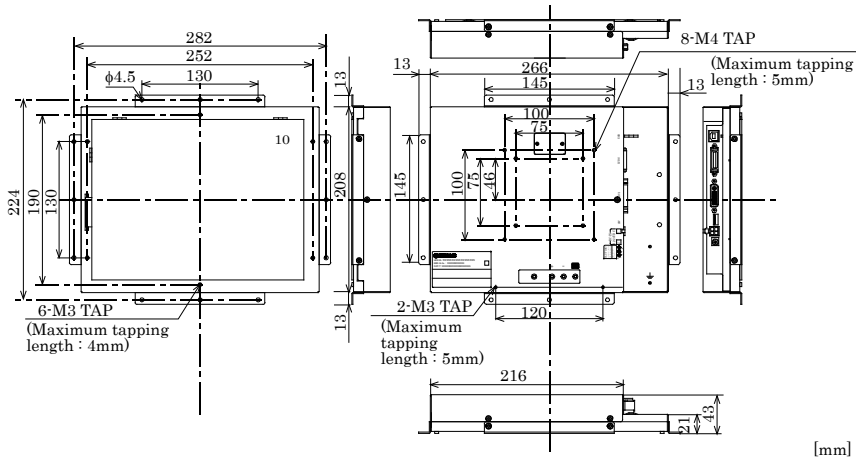


Figure 2.2. Physical Dimensions of Main Unit (FPD-M75VT-DC1)

FPD-L75ST-DC1

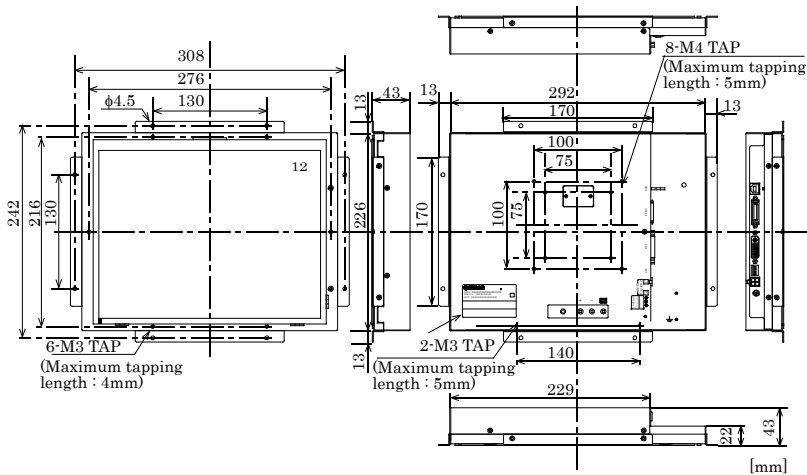


Figure 2.3. Physical Dimensions of Main Unit (FPD-L75ST-DC1)

3. Part Names

Part Names

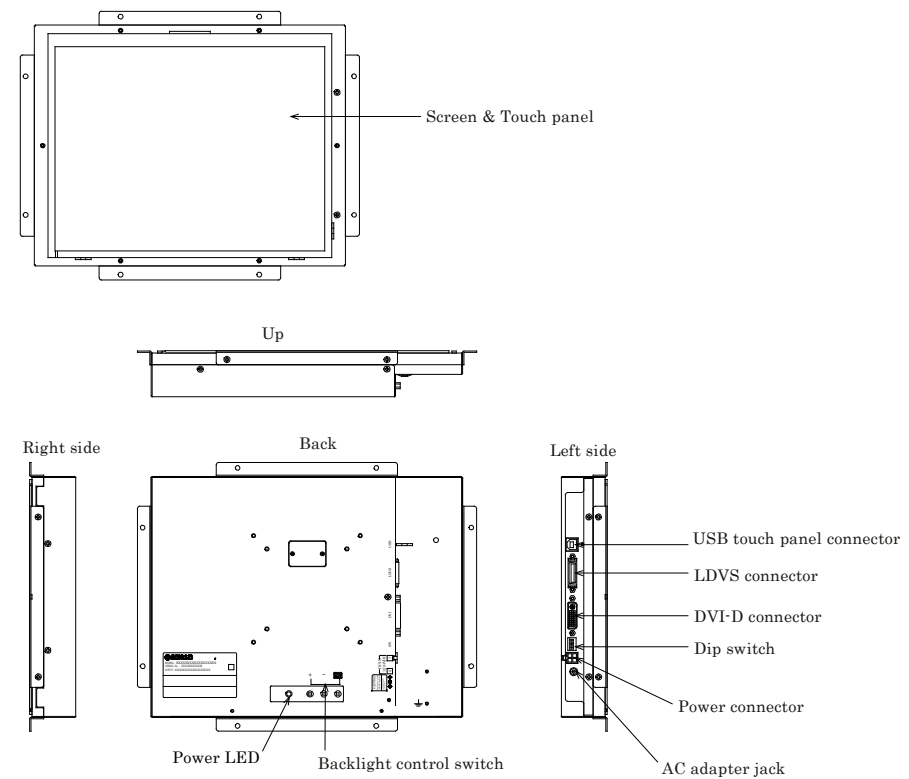


Figure 3.1. Part Names

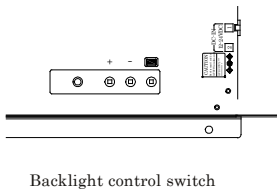



Figure 3.2. Backlight control switch

LVDS Input Interface Connector

It can connect to the host computer which outputs to the LVDS by using the optional LVDS cable. For more details on the connectable host computer or notes in connection, refer to chapter 5, “Connection to the Host Computer”.

Table 3.1. LVDS Input Interface Connector

Connector used	Half pitch 26 pin connector (DX10GIM-26SE or equivalence to it)		
 ↓ Lower side is display part.			
Pin No.	Signal name	Pin No.	Signal name
1	BLK_EN (+3.3V)	14	RESERVED
2	RXD	15	RESERVED
3	TXD	16	RESERVED
4	DDCCLK (+3.3V)	17	DDCDATA (+3.3V)
5	GND	18	GND
6	A_CLK-	19	RESERVED
7	A_CLK+	20	RESERVED
8	GND	21	GND
9	A_TX2-	22	A_TX3-
10	A_TX2+	23	A_TX3+
11	GND	24	GND
12	A_TX0-	25	A_TX1-
13	A_TX0+	26	A_TX1+

* Leave "Reserved" pins unconnected.

DVI-D Input Interface Connector

It can connect to the host computer which outputs to the DVI-D by using the optional DVI cable. For more details on the connectable host computer or notes in connection, refer to chapter 5, “Connection to the Host Computer”.

Table 3.2. DVI-D Input Interface Connector


Connector used	24 pin DVI-D		
↓ Lower side is display part.			
Pin No.	Signal name	Pin No.	Signal name
1	TMDS DATA2-	13	N.C.
2	TMDS DATA2+	14	+5V (INPUT)
3	GND	15	GND
4	N.C.	16	HPD
5	N.C.	17	TMDS DATA0-
6	DDC CLK (+5V)	18	TMDS DATA0+
7	DDC DATA (+5V)	19	GND
8	N.C.	20	TXD
9	TMDS DATA1-	21	RXD
10	TMDS DATA1+	22	GND
11	GND	23	TMDS CLK+
12	N.C.	24	TMDS CLK-

* Host computer corresponding to the dual link cannot be connected.

USB Touch Panel Connector

The USB connector for communication between the host computer and touch panel.

Table 3.3. USB Touch Panel Connector

Connector used	USB Type B(Receptacle)		
 ↓ Lower side is display part.			
Pin No.	Signal name	Pin No.	Signal name
1	+5V (INPUT)	3	DATA+
2	DATA-	4	GND

Dip Switch

A DIP switch is located on the left side of the unit.


When using it in a normal way, set it to all OFF (The default factory setting).



CAUTION

Ensure that the power is turned OFF before changing the DIP switch settings.

Table 3.4. Setting a Dip Switch

	No.	Setting description	Factory setting
 ↓ Lower side is display part.	1	Reserved (Leave this at OFF.)	OFF
	2		OFF
	3		OFF
	4	Reserved (Leave this at OFF.)	OFF
	5	Reserved (Leave this at OFF.)	OFF
	6	Reserved (Leave this at OFF.)	OFF
	7	Reserved (Leave this at OFF.)	OFF
	8	Reserved (Leave this at OFF.)	OFF

Back SW For Backlight Control

These products have a SW for backlight control on the back side. Backlight ON/OFF and the brightness adjustment can be done with this switch.

The backlight can be controlled by the software control from the host computer side.

	It turns on or off the backlight. If there is no video signal input, backlight does not turn on. All the settings can be reset to the factory defaults by turning on these products while holding down this key.
	It raises the brightness one rank up. Keeping pushing this button raises the brightness up to maximum.
	It lowers the brightness one rank down. Keeping pushing this button lowers the brightness down to minimum.

4. Hardware Setup

Installation Requirements

Ambient temperature

In this product, the ambient temperature is decided from the multiple measurement points as shown below. When making use of the product, the air current should be adjusted to prevent that all the temperatures measured at the measurement points exceed the specified temperature.

Note that the measurement points in this figure indicates the distances from the edges of this product.

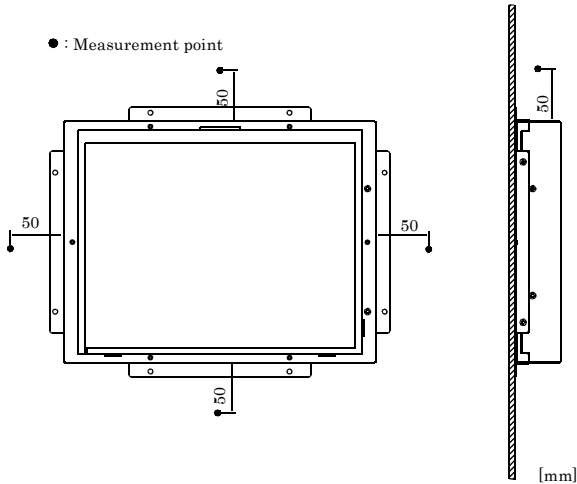


Figure 4.1. Ambient temperature

To maintain the ambient temperature within the installation environment requirement range, provide a gap of 50mm or more between the main unit and any adjacent equipment.

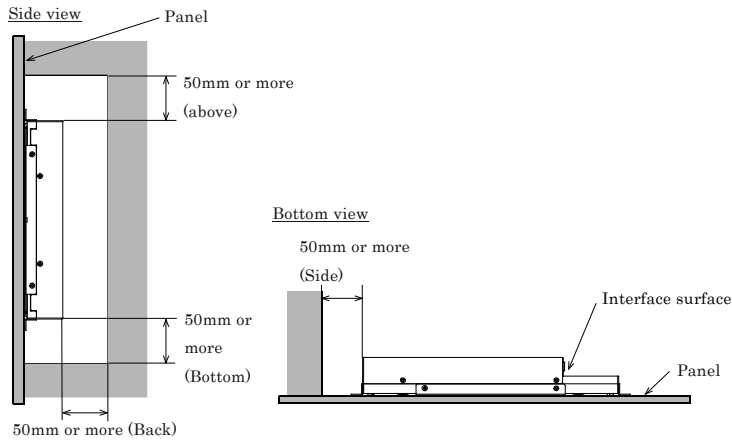


Figure 4.2. Distances Between Computer and Surroundings

Installed angle which is recommended

Installed angle of this product which is recommended is 0 - 45°. Except for that, the temperature specification of this product might not be filled.

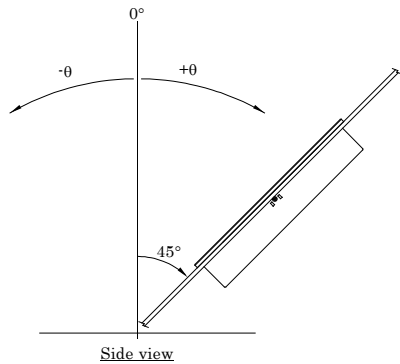


Figure 4.3. Installed angle which is recommended

Panel Cut

Cut the display mount panel in the following dimensions. The four corners of the solid-line rectangle define the panel cut dimensions.

FPD-M75VT-DC1

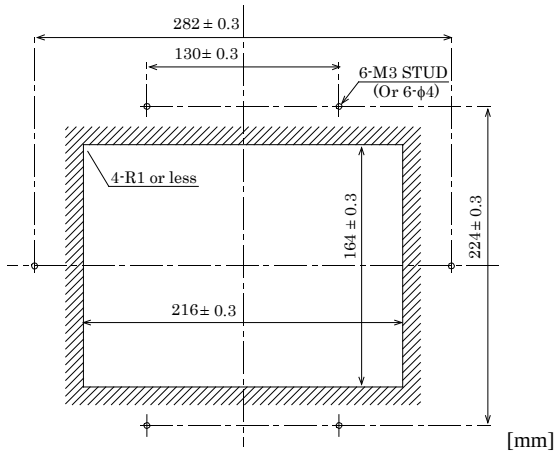


Figure 4.4. Panel Cut Dimensions (FPD-M75VT-DC1)

FPD-L75ST-DC1

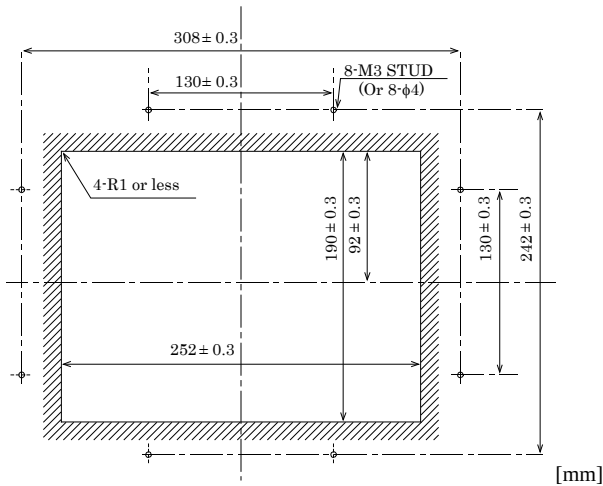


Figure 4.5. Panel Cut Dimensions (FPD-L75ST-DC1)

FPD-H75XT-DC1

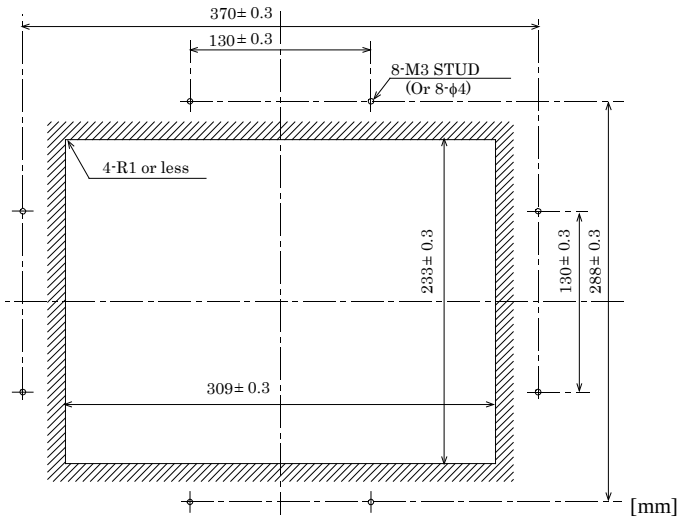


Figure 4.6. Panel Cut Dimensions (FPD-H75XT-DC1)

Attaching the attachment fittings to the Main Unit

When installing on a STUD installation panel

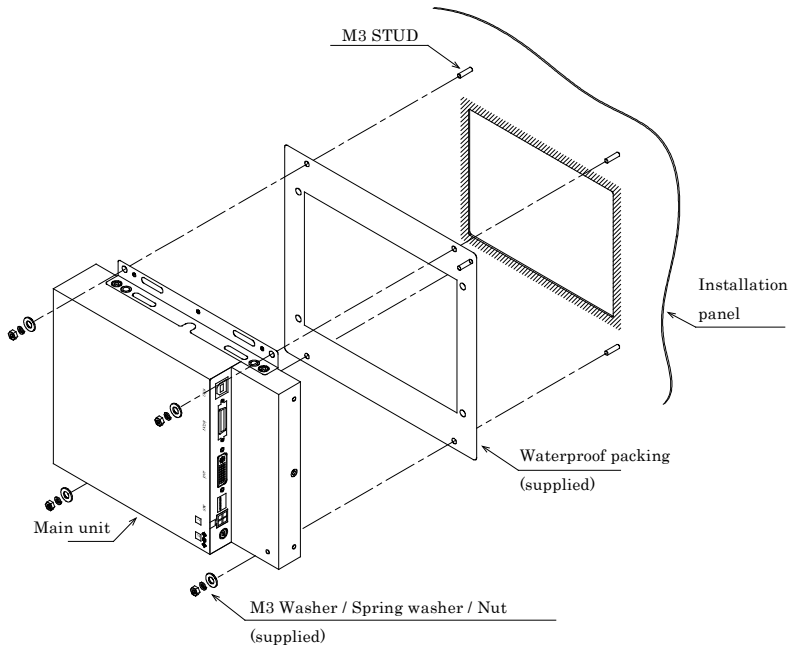


Figure 4.7. Example attachment < 1 / 2 >

When using installation panel with screw holes

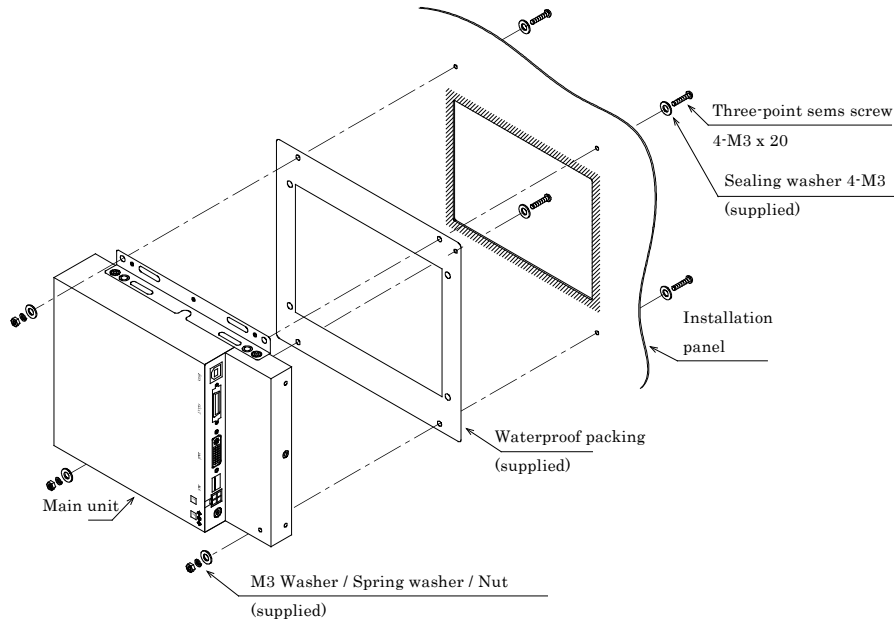


Figure 4.7. Example attachment < 2 / 2 >

Other Panel Attachment Examples

As the FPD-75 series are suitable for a wide range of embedded applications, the units can be attached using methods other than the attachment brackets.

Note that the front part no longer complies with IP65 waterproofing if attached using the following method.

To make the front part compliant with the IP65 waterproofing standards, attach the units using the hole positions shown in the panel cut described above.

If using any method other than those described above to attach the unit, please investigate carefully and attach the unit at your own risk.

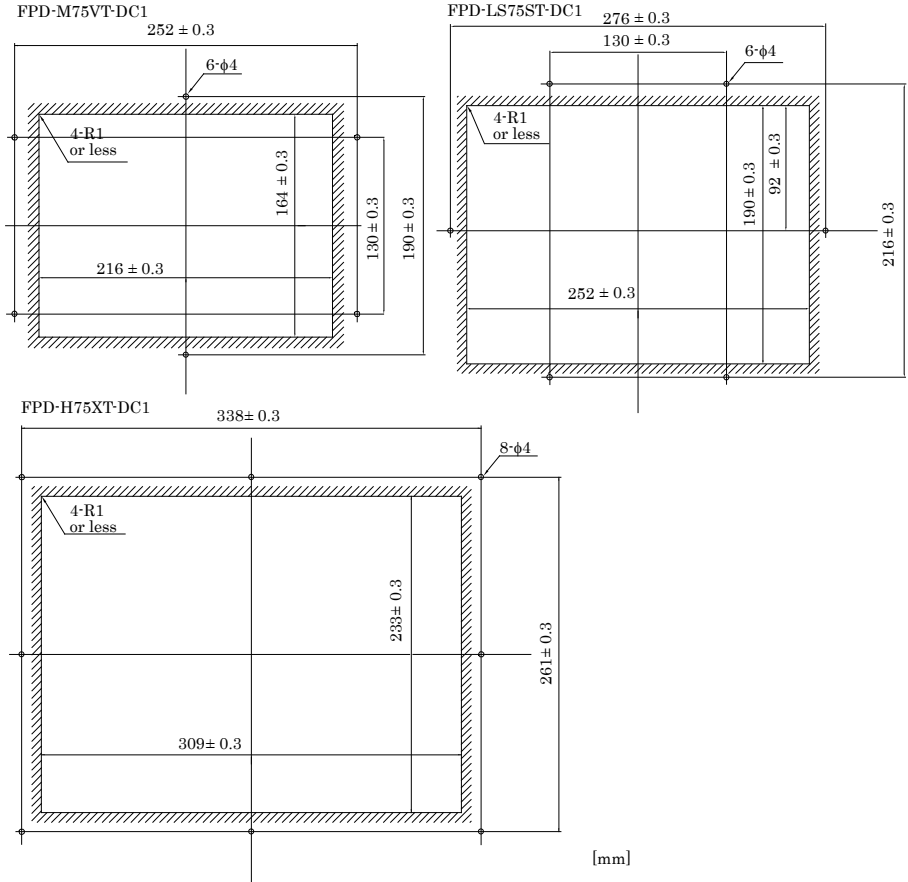


Figure 4.8. Panel Opening Dimensions

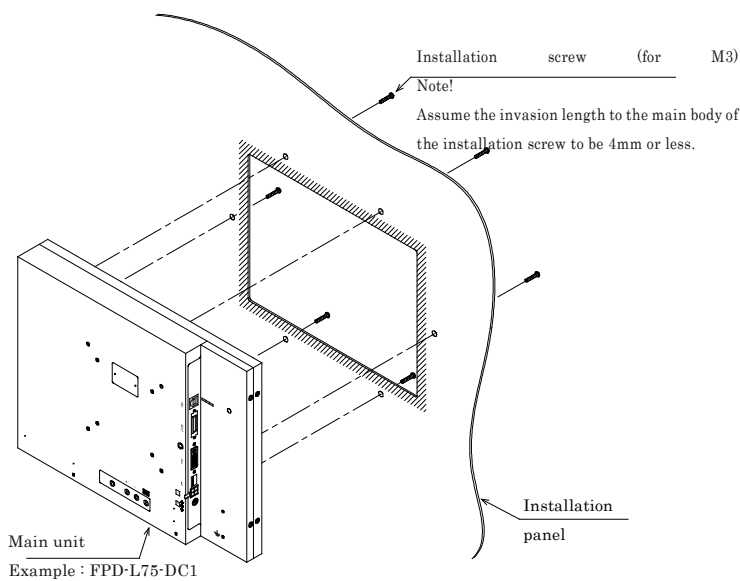


Figure 4.9. Example attachment

5. Connection to the Host Computer

Purchase individual connection cables as they are not bundled with this equipment.

LVDS Interface Connection

These products can be connected to CONTEC host computer (IPC Series and single board computer (SBC)) that have LVDS display output. Connect the LVDS connector of supported host computer with these products using the dedicated LVDS connecting cable.

As for the specific IPC Series or SBC, you need to change the BIOS setting to display it appropriately by the LVDS input. For more details on this, refer to the manual for each HOST computer.

When connecting to a SBC

LVDS conversion bracket and LVDS cable are required (separately available).

Be sure to connect a conversion cable that supports each LVDS output pin header, and then connect the LVDS connector of the cable with these products using a LVDS cable.

Depending on the SBC, two or more LVDS output pin headers are equipped. Be sure to check the connector reference No. of conversion cable and each SBC. Then connect it to the appropriate connector.

Conversion cable	SBC	Reference
FPD-30F26F	SEH-9450-LAS	LVDS1
	SPC-9450-LA	LVDS1
	SPC-852x-LA	CNK1
	SLC-85xx-LxA	CN15
FPD-20F26F	SPI-855x-LLVAS	CN18
	SPI-8550-LA	CN18
	SPI-845x-LLVA	CN12

WARNING

When using the SLC-85xx-LxA, SPC-9450-LAS or SEH-9450-LAS. Be sure to connect FPD-30F26F to the 30 pin LVDS output pin header connector before use. These SBC which have 20pin LVDS output pin header, be sure to use not the FPD-20F26F but the FPD-30F26F.

CAUTION

Connecting FPD-M75VT-DC1 and SPC-852x-LA is not supported.

When connecting to a SPI-855x/IPC-BX8x0 series

The LVDS output is set to Disabled by default. It is required to change the LVDS output to Enabled via BIOS menu.

- 1. Select “Video Features” from “Advanced” menu.

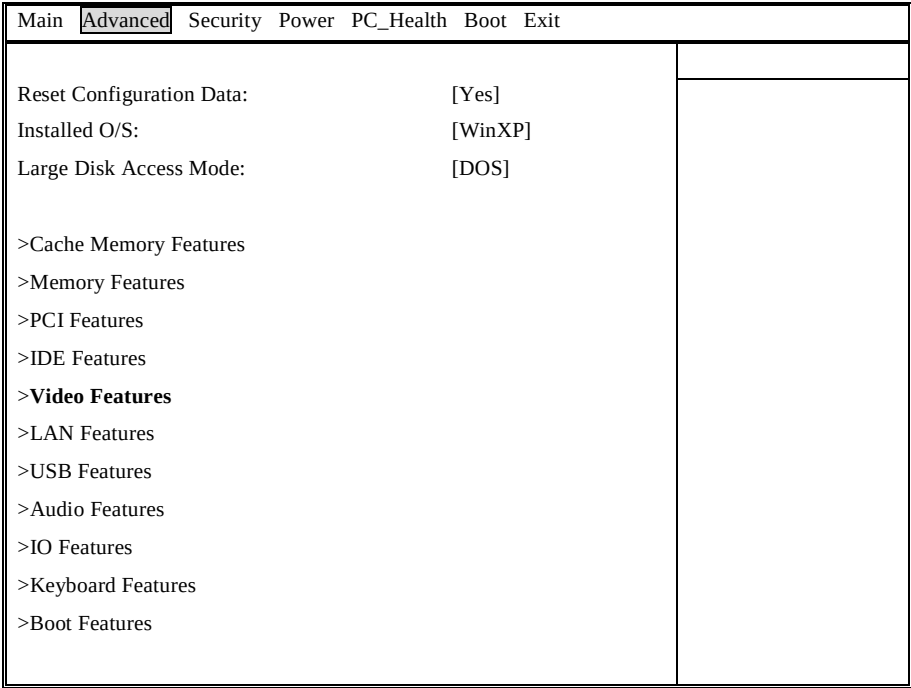


Figure 5.1. Advanced Menu Screen

2. Change “Boot Type” to “CRT+LCD”.

Main	Advanced	Security	Power	PC_Health	Boot	Exit
Video Features						
IGD - Device 2:						[Enabled]
IGD - Device 2, Function 1:						[Enabled]
IGD - Memory Size:						[UMA = 8MB]
IGD - Boot Type						[VBIOS Default]
IGD - LCD Panel Type						[1024x768 LVDS]
Video device select :						[Internal]
Internal DDC ROM						[Enabled]
Splash Screen Size						[1024x768]

Figure 5.2. Video Features Screen

When connecting to a SEH-9450-LAS/SPC-9450-LV/SPI-845x-LLVA/SLC-85xx-LxA/SPC-852x-LA/IPC-BX701/IPC-BX900/IPC-BX950 series

It is required to set the output resolution to a right one via BIOS according to the supported resolution of the connected flat panel display.

- 1. Select the “Advanced Chipset Features”.

Phoenix - AwardBIOS CMOS Setup Utility

Advanced Chipset Features

DRAM Timing Selectable	[By SPD]	Item Help
x CAS Latency Time	Auto	Menu Level ►
x DRAM RAS# to CAS# Delay	Auto	
x DRAM RAS# Precharge	Auto	
x Precharge delay (tRAS)	Auto	
x System Memory Frequency	Auto	
SLP_S4# Assertion Width	[1 to 2 Sec.]	
System BIOS Cacheable	[Enabled]	
Video BIOS Cacheable	[Disabled]	
Memory Hole At 15-16M	[Disabled]	
► PCI Express Root Port Func	[Press Enter]	
** VGA Setting **		
PEG/Onchip VGA Control	[Auto]	
On-Chip Frame Buffer Size	[8MB]	
DVMT Mode	[DVMT]	
DVMT/FIXED Memory Size	[128MB]	
Boot Display	[CRT+LFP]	
Panel Number	[1024 x 768]	

↑↓↔:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Figure 5.3. Advanced Chipset Features Setup

- 2. Specify the output resolution corresponding to the connected display from the “Panel Number”.

Panel Number	
640 x 480	 []
800 x 600	 []
1024 x 768	 [■]
↑↓:Move ENTER:Accept ESC:Abort	

Figure 5.4. Panel Number Setup

 CAUTION

- Do not connect it with the DVI-D at the same time. Doing so may provide abnormal screen display.
- DOS prompt may fail to display the full screen depending on the PC for connection . In such a case, you can display it by changing the display driver setting to the one of the followings.
 1. Select the "Intel(R) Dual Display Clone" and change the primary device to the notebook.
 2. Select the "twin" on the multiple display setting.
 3. Select the "Notebook" on the single display setting.

Note that the above setting is used when the "Intel Extreme Graphics2" is used. The setting item may be quite different and depend on the other driver and version.

- Depending on the following IPC Series or SBC, you may fail to set the VGA (640 x 480) in the resolution. In such a case, it is required to update the BIOS, so please contact your retailer.
IPC Series : IPC-BX701 Series, IPC-BX900 Series
SBC : SEH-9450-LAS, SPC-9450-LA, SPI-845x-LLVA, SLC-85xx-LxA
-

DVI-D Interface Connection

Connect the DVI-D input on this unit to the DVI-D connector on the host computer or the PanelLink connector. You can use a CONTEC IPC series or SBC (single board computer) as the host computer. In this case, settings are required on each host computer.

Set the LCD type as follows depending on the host computer to be used.

When connecting to a IPC-BX/M630(PCI) series

No specific host settings are required if using this box computer. However, if using the Windows XP operating system, only connect the analog RGB cable during installation. Change to the DVI connection after installation completes.

When connecting to a IPC-BX/M360(PCI)C Series

Set the size of the connecting display by selecting “Advanced Chipset Features Setup” – “Panel Type” in the BIOS setting section.

Example) For FPD-L7xST-DC1 : “800 x 600”



CAUTION

- If connecting this display to a product with the “AUTO Select” function such as IPC-BX/M360(PCI)C etc., or to a product with the “plug and play” function such as the IPC-BX/M630(PCI) series, first connect cables, then turn on the display, always before turning on the host computer. If the host computer is started before the display, it may not be able to read the information on the display, and as a result, no screen image may come up.

In this case (e.g. when the display is turned on afterward, when a cable is connected afterward), specify the display size in the BIOS settings on the host computer.

- Do not connect these products with the LVDS at the same time. When doing so may cause an abnormal display in the screen.
 - Connecting FPD-M75VT-DC1 and IPC-BX950TxD is not supported.
-

Touch Panel Data Communications

These connections are used to send touch panel data to the host computer via the USB or RS-232C.

If you use the touch panel via the RS-232C connection, you do not have to use the RS-232C cable because both LVDS and DVD-D interface includes the RS-232C signal line.

If you use the touch panel via the USB connection, you have to use the USB cable to connect this product to the USB port on the host computer.

Table 5.1. Example of a USB connection cable (USB Type A(Host) ⇄ Type B(Display)cable)

Model	Maker	Cable length
KU20-2H	SANWA SUPPLY INC.	2m
KU20-5H	SANWA SUPPLY INC.	5m

Note that some types of BOX-PC/SBC require certain care in making a touch panel connection via RS-232C: followings should be referred to for connecting them with some configuration changes.

- When connecting to SBC

For some SBCs, the DVI/LVDS connector touch panel signals and the pin header output COM ports are mutually exclusive. When this product is connected with one of the SBCs listed in the table below, note that the SBC's corresponding COM port is unavailable irrespective of the use of touch panel.

SBC	I/F	Unavailable SBC Serial Connector
SPC-852x-LA	LVDS	Serial 1 (CNG1)
SPC-8450-LVA	DVI-D	Serial 1 (CN1)
SPI-855x-LLVAS	DVI-D	Serial 1 (CN13)
SPI-845x-LLVA	DVI-D	Serial 1 (CN6)
SPI-815x-LLVA	DVI-D	Serial 1 (CN9)
SLC-8550-LVA	LVDS	Serial 6 (CN5)
SEH-9450-LAS	LVDS	Serial 1 (COM1)

Note that the SBC series products connected by using the conversion bracket FPD-20F26F do not have the RS-232C in the LVDS interface so the touch panel must be connected via USB.

- When connecting to BOX-PC

Note that the following IPC series products do not have the RS-232C in the DVI-D interface so the touch panel must be connected via USB.

- IPC-BX950TxD series (DVI-D interface)

For more details on the allocation to RS-232C port No. in the LVDS/DVI-D connector, refer to the manual for each PC.

CAUTION

- Touch panel driver software is required to use the touch panel. Purchase optional driver software [IPC-SLIB-01 for windows or IPC-TPB1-DRV for Windows] or download one from the CONTEC's web site.
 - The USB touch panel driver software requires Ver1.52 or later of IPC-SLIB-01.
 - The USB connection can only be used on Windows XP, 2000, or 98SE. Connect via the RS-232C interface if using a different OS.
 - Use either USB or RS-232C for connecting the touch panel. The touch panel cannot be connected via both interfaces at the same time.
 - When using the USB connection, the screen image may disappear momentarily when the USB cable is connected or disconnected and when the computer power is turned ON or OFF.
 - When using the USB connection via a hub, the unit may not operate correctly in some cases depending on the other USB devices connected to the hub. Please check the operation before using in practice.
 - If you connect these products to the SBC products which have the 20-pin LVDS output pin header, use the touch panel via the USB connection because RS-232C signal line is not included in the LVDS interface.
-

6. Power Supply Connection

These products can connect the DC power or AC adapter for the power supply.

⚠ CAUTION

- Input the power supply to the DC power supply connector only or the AC adapter jack only. Never supply power to both of them at the same time as it can cause a fault.
- If you connect a power supply other than the optional AC adapter, be sure to take safety measures for the power supply, such as overvoltage protection. Use meticulous care not to mistake the connection polarity or voltage of the power supply as it may break the equipment, the power supply, or both.
- When power cycling, wait for more than ten seconds before use.


DC Power Supply Input Connector : DC-IN

When connecting the power supply, ensure that the supply satisfies the specifications below.

Power supply voltage : 12 - 24VDC±5%
Power supply capacity : 12V 3A or more, 24V 1.5A or more

Please process it as shown in the table below by using an attached housing and contact. Then connect it.

Table 6.1. DC power supply connector

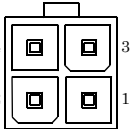Connector type		9360-04P (mfd. by ALEX)	
		Pin No.	Signal name
		1	GND
		2	GND
		3	12 - 24V
		4	12 - 24V

Applicable connector of cable side

Housing : 9357-04 (mfd. by ALEX) or 5557-04R (mfd. by MOLEX)
Contact : 4256T2-LF (mfd. by ALEX) or 5556 (mfd. by MOLEX)
Cable : AWG#18 - 24
Crimp tool : 57026-5000 (UL1007) (mfd. by MOLEX), 57027-5000(UL1015) (mfd. by MOLEX)

Rise time of power supply

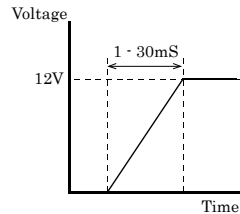


Figure 6.1. Graph of Rise Time of Power Supply

AC Adapter Jack

The AC adapter jack is used to connect the AC adapter [IPC-ACAP12-01] available as an option. Do not connect any AC adapter other than the option.




Figure 6.2. AC Adapter Jack

AC adapter code removal prevention fitting

- (1) Insert the plug of AC Adapter.
- (2) Tighten the screws on the attachment fitting.

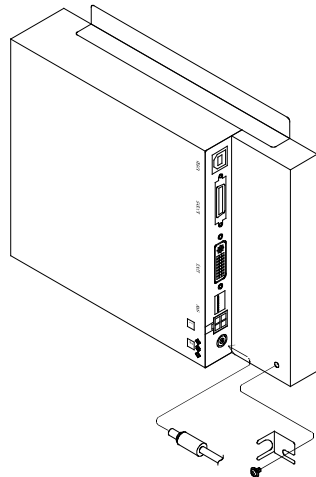


Figure 6.3. Code Removal Prevention Fitting

7. LED Indicators

The POWER LED on the back face indicates each state of the display as follows:

Table 7.1. LED Indicators

LED status	Description
OFF	The power supply off or these product not started normally
Green(ON)	Normal operation
Green (Flashing)	Power save mode
Orange (Flashing)	No signal input *1

*1 These products enter the power save mode automatically when no signal has been inputs.

8. Touch Panel

This equipment has a touch panel that enables keyboard-less, mouse-less operations by communication with the host computer using the RS-232C cable.

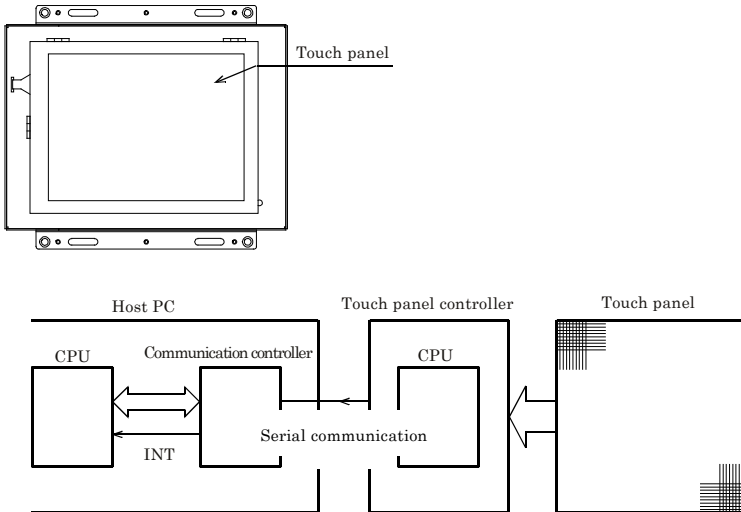


Figure 8.1. Touch Panel and Block Diagram

Data input at the touch panel is processed by the touch panel controller and passed to the host PC via the serial port on the CPU in the controller.

Before the touch panel can be used, touch panel driver software must be installed. Note that the driver software is not bundled with this product. Purchase the one separately or download it from the CONTEC's web site.

For further details, refer to the READ_ME file for each driver.

<Option touch panel driver>

Windows XP/2000/NT 4.0/98SE/95OSR2 : IPC-SLIB-01

9. Display Mode

This equipment supports the following display modes:

Video mode	Number of pixels (dot)	Dot clock (MHz)	Horizontal frequency (kHz)	Vertical frequency (Hz)	Display	
					FPD-L75ST-DC1	FPD-H75XT-DC1
VGA	640 x 480	25.18	31.47	60	O	O
VESA	800 x 600	40.00	37.88	60	⊙	o
VESA	1024 x 768	65.00	48.36	60	x	⊙

- x: Display is unavailable
- O: Display available (Depending on the scaling function of host PC)
- ⊙: Recommended resolution (mode)

 **CAUTION**

- The number of display pixels in the LCD is 640 x 480 dots on FPD-M75VT-DC1, 800 x 600 dots on FPD-L75ST-DC1 model and 1024 x 768 dots on the FPD-H75XT-DC1 model.
When the input has a resolution lower than the number of display pixels of each model whether or not an auto scaling function from the host PC exists, etc.,. Note, in this case, that the display quality is therefore degraded in clearness compared to the screen displayed at the resolution that matches the number of display pixels of the LCD and the display area is not displayed in the full screen because it exists in the center of screen.
- The screen will not display correctly if the resolution and frequency do not match one of the supported display modes.

10.Options

Screen protective sheets

- IPC-CV : 10.4-inch [FPD-M75VT-DC1] screen protective sheets (10 sheets)
- IPC-CV12 : 12.1-inch [FPD-L75ST-DC1] screen protective sheets (10 sheets)
- IPC-CV15 : 15-inch [FPD-H75XT-DC1] screen protective sheets (10 sheets)

Display cable only for DVI-D

- IPC-DVI/D-020 : DVI-D cable (2m)
- IPC-DVI/D-050 : DVI-D cable (5m)

Display cable only for LVDS

- FPD-26M26M-005 : LVDS cable (0.5m)
- FPD-26M26M-020 : LVDS cable (2m)
- FPD-26M26M-050 : LVDS cable (5m)

Conversion cable for SBC *1

- FPD-20F26F : LVDS connector conversion cable (20-pin header connector)
- FPD-30F26F : LVDS connector conversion cable (30-pin header connector)

*1 LVDS cable FPD-26M26M-005, FPD-26M26M-020 or FPD-26M26M-050 is required separately.

Driver

- IPC-SLIB-01 : Driver & Utility Soft Set (CD-ROM version) *2

*2 You can download the driver from the CONTEC Web site (free of charge)

Others

- IPC-ACAP12-02 : AC ADAPTER (DC12V)
 - Input : Voltage is 90 - 264VAC, current is 1.3A or less
(when the input voltage is 100VAC)
 - Output : Voltage is 12VDC, current is 4A.

Recommendation Cable (Maker: SANWA SUPPLY INC.)

- KU20-2H : USB cable for touch panel (2m)
- KU20-5H : USB cable for touch panel (5m)

FPD-M75VT-DC1 FPD-L75ST-DC1 FPD-H75XT-DC1 User's Manual

CONTEC CO.,LTD.

August 2015 Edition

3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

Japanese <http://www.contec.co.jp/>

English <http://www.contec.com/>

Chinese <http://www.contec.com.cn/>

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD. [12092008]

[10062008]

Management No. A-51-624

[08052015_rev3]

Part No. LYJV593